Autobrade Red
Air Tools For The Body Shop

AUTOMOTIVE

Parts Page Reorder No. APD99•05
Effective January, 1999

Mini-Ratchet

Model:
18030 – 1/4”
18031 – 3/8”

Air Motor and Machine Parts.

⚠WARNING **Always operate, inspect and maintain this tool in accordance with the Safety Code for portable air tools (ANSI B186.1) and any other applicable safety codes and regulations. Please refer to Dynabrade's Warning/Safety Operating Instructions for more complete safety information.**

Index Key

No.	Part	Description
1	**18469**	Retaining Ring
2	**18467**	Thrust Washer - 1/4”
	18467	Thrust Washer - 3/8”
3	**18466**	Steel Ball
4	**18465**	Thrust Washer Spring
5	**18463**	1/4” Square Anvil
	18464	3/8” Square Anvil
6	**18462**	Dowel Pin
7	**18461**	Reverse Spring
8	**18460**	Reverse Pin
9	**18459**	Ratchet Pawl
10	**18457**	Reverse Lever - 1/4”
	18457	Reverse Lever - 3/8”
11	**18456**	Roll Pin
12	**18455**	Wear Washer
13	**18451**	Mini-Boot
14	**18452**	Yoke
15	**18453**	Drive Bushing
16	**18454**	Crank Shaft
17	**18470**	Ratchet Housing
18	**18471**	Needle Bearing
19	**18472**	Lock Ring
20	**18473**	Retaining Ring
21	**18474**	Planet Cage (incl. pins)
22	**18475**	Planet Pin
23	**18476**	Planet Gear
24	**18477**	Internal Gear
25	**18478**	Bearing
26	**18479**	Roll Pin
27	**18480**	Front Plate
28	**18481**	Roll Pin
29	**18482**	Cylinder
30	**18483**	Rotor
31	**18484**	Blade (4/pkg.)
32	**18485**	Rear Plate
33	**18486**	Retaining Ring
34	**18471**	Needle Bearing
35	**18488**	Motor Housing
36	**18496**	Throttle Lever
37	**18495**	Roll Pin
38	**18494**	Roll Pin
39	**18493**	Valve Pin
40	**18492**	Valve
41	**18491**	Valve Spring
42	**18490**	O-Ring
43	**18489**	Air Regulator
44	**18497**	O-Ring
45	**18498**	Inlet Bushing
46	**18499**	Retaining Screw
47	**18500**	Housing Cover
48	**18501**	Ratchet Head Assy. 1/4”
49	**18502**	Ratchet Head Assy. 3/8”

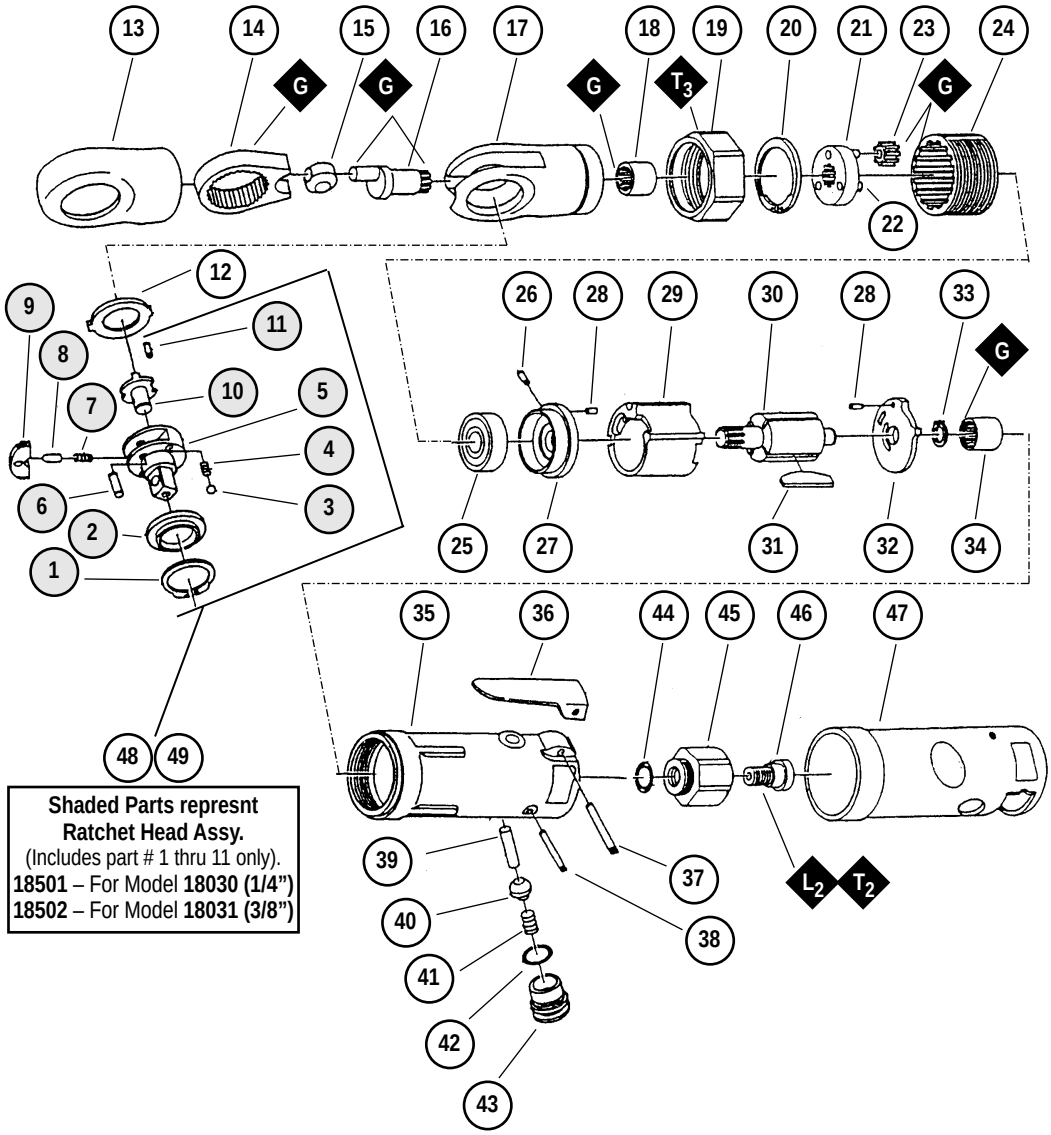

Shaded Parts represnt Ratchet Head Assy.
(Includes part # 1 thru 11 only).
18501 – For Model **18030 (1/4”)**
18502 – For Model **18031 (3/8”)**

KEY

- **O** Oil — **G** Grease
- **L** Loctite/Hernon: L_2 **= Hernon #940**
- **T** Torque: N•m x 8.85 = In. - lbs. **T_2 = 17 N•m, T_3 = 23 N•m**

See reverse side for Accessories and Important Operating, Maintenance and Safety Instructions.

Autobrade Red Important Operating, Maintenance and Safety Instructions

Carefully read all instructions before operating or servicing any Dynabrade® Abrasive Power Tool.
Warning: Hand, wrist and arm injury may result from repetitive work motion and overexposure to vibration.
Important: All Dynabrade air tools must be used with a Filter-Regulator-Lubricator to maintain all warranties.

Operating Instructions:

Warning: Eye, face and body protection must be worn while operating power tools. Failure to do so may result in serious injury or death. Follow safety procedures posted in workplace.

1. With power source disconnected from tool, securely fasten abrasive/accessory on tool.
2. Install air fitting into inlet bushing of tool. **Important:** Secure inlet bushing of tool with a wrench before attempting to install the air fitting to avoid damaging valve body housing.
3. Connect power source to tool. Be careful not to depress throttle lever in the process.
4. Check tool speed with tachometer. If tool is operating at a higher speed than the RPM marked on the tool or operating improperly, the tool should be serviced to correct the cause before use.

Maintenance Instructions:

1. Check tool speed regularly with a tachometer. If tool is operating at a higher speed than the RPM marked on the tool, the tool should be serviced to correct the cause before use.
2. Some silencers on air tools may clog with use. Clean and replace as required.
3. All Dynabrade air motors should be lubricated. Dynabrade recommends one drop of air lube per minute for each 10 SCFM (example : if the tool specification state 40 SCFM, set the drip rate of your filter-lubricator at 4 drops per minute). Dynabrade Air Lube (P/N **95842**: 1pt. 473ml.) is recommended.
4. An air line filter-regulator-lubricator must be used with this air tool to maintain all warranties. Dynabrade recommends the following: **11411** Air Line Filter-Regulator-Lubricator — Provides accurate air pressure regulation, two-stage filtration of water contaminants and micro-mist lubrication of pneumatic components. Operates 28 CFM @ 90 PSI has 3/8" NPT female ports.
5. Use only genuine Dynabrade replacement parts. To reorder replacement parts, specify the **Model #**, **Serial #**, and **RPM** of your machine.
6. Mineral spirits are recommended when cleaning the tool and parts. Do not clean tool or parts with any solvents or oils containing acids, esters, keytones, chlorinated hydrocarbons or nitro carbons.

Safety Instructions:

Products offered by Dynabrade should not be converted or otherwise altered from original design without expressed written consent from Dynabrade, Inc.

- **Important:** User of tool is responsible for following accepted safety codes such as those published by the American National Standards Institute (ANSI).
- Operate machine for one minute before application to workpiece to determine if machine is working properly and safely before work begins.
- Always disconnect power supply before changing abrasive/accessory or making machine adjustments.
- Inspect abrasives/accessories for damage or defects prior to installation on tools.
- Please refer to Dynabrade's Warning/Safety Operating Instructions Tag (Reorder No. **95903**) for more complete safety information.
- **Warning:** Hand, wrist and arm injury may result from repetitive work, motion and overexposure to vibration.

Autobrade Red Tool Warranty

Following the reasonable assumption that any inherent defect which might prevail in a product will become apparent to the user within **6 months** from the date of purchase, "Autobrade Red" tools are warranted against defects in workmanship and materials under normal use and service.
We shall, at our option, repair or replace at our factory, any "Autobrade Red" tool which shall, within 6 months after delivery to the original purchaser, indicate upon our examination to have been defective.

Our obligation is contingent upon proper use of "Autobrade Red" tools in accordance with factory recommendations, instructions and practices.
The warranty shall not apply in these cases:

1. Normally wearable parts such as bearings, rotor blades, etc.
2. Consumables such as sanding pads, etc.
3. Misuse, neglect in maintaining tool or tool modification.
4. Lack of lubrication or evidence of rust, dirt or corrosion.
5. Tools requiring normal tune-up or cleaning.
6. Tools being used after they are badly worn such as using ratchet with worn yoke.
7. Ratchets anvils damaged by excessive hand torquing.
8. Use in production-type applications.

Products, to be considered for warranty, must be sent back to our factory, transportation prepaid by the user. Please send tool back to attention of "Repair Department" with note fully explaining the nature of the problem along with a copy of original invoice indicating model and serial number.

Return product to:
Dynabrade, Inc.
Attn: Repair Department
8989 Sheridan Dr.
Clarence, NY 14031

Visit our new Web Site On-Line: http://www.dynabrade.com

Autobrade Red
Air Tools For The Body Shop

DYNABRADE®

DYNABRADE Automotive Aftermarket 8989 Sheridan Drive • Clarence, NY 14031-1490 • Phone: (716) 631-0100 • Fax: 716-631-2073
©DYNABRADE, INC., 1999
PRINTED IN USA